

SoundPlus® Infrared System • Model WIR SYS 90V



Description:

The TX90 two channel IR transmitter combines modulator and emitter technology into a single operating unit, which reduces operating cost and eliminates precious rack space. The TX90 transmitter produces a wide-angle infrared signal that concentrates the IR energy efficiently in the listening area. Operating on the 2.3-3.8 MHz bandwidth, the TX90 is less susceptible to radio and lighting interference. Each TX90 transmitter can cover up to 28,000 sq ft (2,600 sq m) in single-channel operation. The coverage area can be easily increased by connecting additional TX9 emitters. A wall/ceiling omnidirectional mount is included, and stand kits are available for portable operation.


Applications:

**Cinemas • Simultaneous Interpretation • Audio Description • Conferences • Multi-Media Rooms
Boardrooms • Courtrooms • Schools • Universities • Churches**

WIR TX90 Transmitter:

Dimensions, Weight:	11.25" W x 6.25" H x 2.125" D (28.6 cm x 15.9 cm x 5.4 cm), 1.8 lbs (0.8 kg)
Color:	Black with white legends, black acrylic lens
Power Supply:	Wall Transformer, 24 VAC, 50-60 Hz, 35 VA, 3-pin MOLEX Connector North America: TFP 010, UL/CSA Europe: TFP 027-01, 2-pin Schuko plug, CE UK: TFP 027-02, 3-pin UK plug, CE
Power Cable:	NEC Class 2 wiring, two-conductor, 18 ga., 200' (61m) max. length
Modulation:	FM Wideband, +50kHz deviation max., 50uS pre-emphasis
Carrier Frequency:	Channel A: Selectable, 2.3/2.8 MHz, Channel B: Selectable, 3.3/3.8 MHz
Emitter IR Power:	3.5 watts
Coverage Area:	28,000 ft ² (2,600 m ²) in single-channel mode when using the RX22-4 Receiver 18,000 ft ² (1,670 m ²) in four-channel mode when using the RX22-4 Receiver 3,500 ft ² (325 m ²) in single-channel mode when using the RX14-2 Receiver 3,063 ft ² (285 m ²) in single-channel mode when using the RX16 Receiver (See coverage area diagrams)
Signal-to-Noise Ratio:	>75 dB, +3dB
Frequency Response:	80 to 15,000 Hz, electrical response
Total Harmonic Distortion:	Less than .2%, electrical response at 1kHz
Compression:	Music preset 1:1, Voice preset 1.5:1, Hearing Assist preset 2:1
Auto Carrier Shut-Off:	20 minute timer shuts off carrier when no audio is present

Fig. 1: TX90 Bottom View:

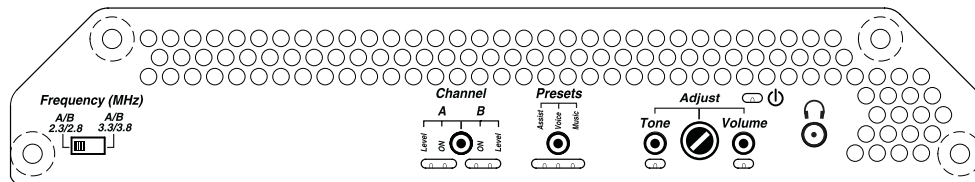

Power Indicator:	Red LED
Audio Volume Level Controls:	CHA and CHB Input Level, press to select, 28 dB adjustable range
Audio Indicators:	CHA and CHB Audio Level, yellow LED, flash
Carrier LEDs:	2 green LED carrier "on" indicators
Phones Output:	3.5mm TRS headphone jack. CH A tip, CH B ring on jack, 32 ohm headphone (min)
Application Preset:	Music, Voice, Hearing Assist. Frequency response; Music: Flat; Voice: Mid-range boost; Hearing Assist: High frequency boost
Tone Control:	Press to select, 21 dB adjustable range (1 kHz between low boost/hi-cut and low cut/hi boost).


NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!

* 90 days on accessories.

SoundPlus® Infrared System • Model WIR SYS 90V



Fig 2: TX90 Rear View

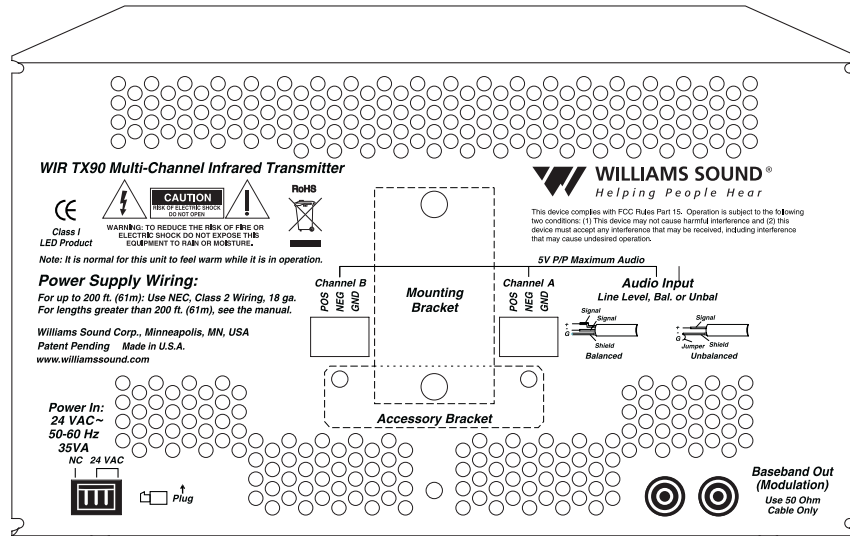

Power Input:	3-Pin Molex, 24 VAC, 50-60 Hz, 35 VA
Audio Input Connector:	CHA and CHB, 3 wire Phoenix
Input Level:	Balanced or unbalanced, 316 mVRMS (-10dBV) nominal, 5.7k input impedance; max input (over volume range) -21 to +7 dBV.
Baseband Output:	BNC, 50 Ω, for use with TX9 only
Baseband Cable:	RG 58 Coax, BNC connectors, maximum 1000' (300m) length
Operating Requirements:	0-50° C (+32°F to 122°F) ambient temperature, non-condensing, non-corrosive atmosphere
Mounting Kits:	Wall or Ceiling Mount: BKT 024 Omnidirectional mount; Optional: Tripod Stands: SS-11 or SS-6
Warranty:	5 years on transmitter, 90 days on accessories
Approvals:	CE, FCC, RoHS, WEEE
Compatible Receivers:	WIR RX22-4 Four-Channel Receiver, WIR RX14-2 Two-Channel Receiver, WIR RX16 Two-Channel Receiver
Notes:	Specifications: Single end input, volume & tone controls at mid point, 1 kHz, "Music" Preset


NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!

SoundPlus® Infrared System • Model WIR SYS 90V



SoundPlus® Infrared System • Model WIR SYS 90V

Fig. 3: Receiver Coverage Area with TX90 Transmitter in Single Channel Mode

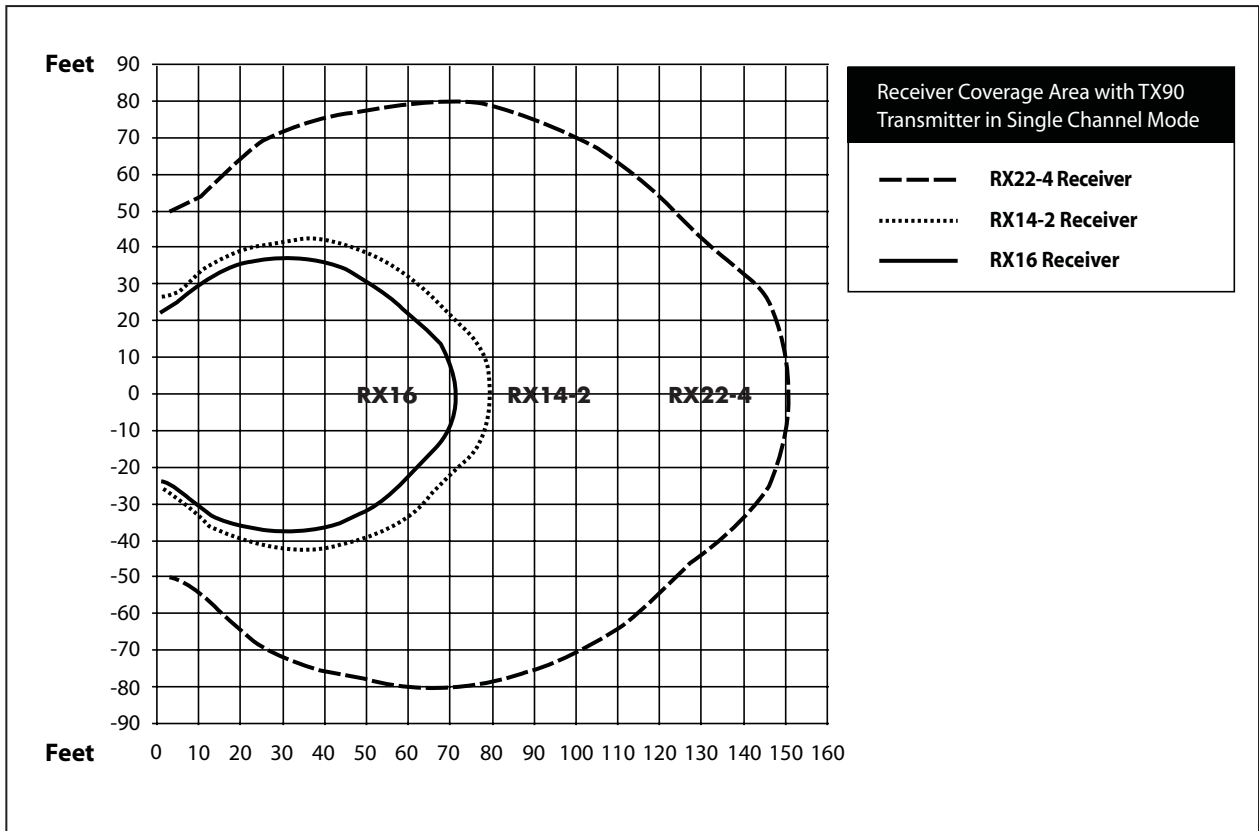

The coverage area for the TX90 will vary depending on the receiver being used. The diagram above demonstrates the receiver coverage when operating a single TX90 transmitter in single channel mode. Patterns are direct radiation patterns.

Note: Reflections of the infrared light from walls, ceilings and floors may change these patterns.


NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!

SoundPlus® Infrared System • Model WIR SYS 90V




SoundPlus® Infrared System • Model WIR SYS 90V

Fig. 4: 3-Dimension Foot Pattern

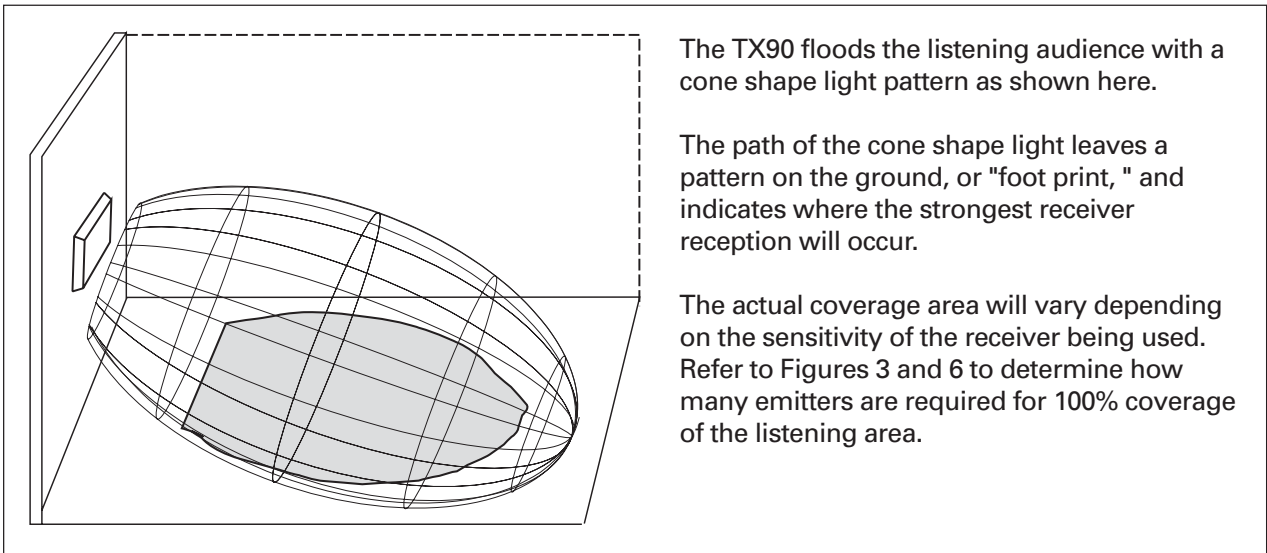

To determine the best location for the transmitter, it helps to think of the IR transmitter as an invisible floodlight. You'll want to aim it so the listeners are "flooded" with the infrared light. The transmitter should also be positioned high enough so it won't be blocked by people and other physical obstructions. See Figure 5 below. Mount the transmitter at least 2 ft. (.61 m) above the audience. Position the transmitter to face in a slightly downward angle, 20°, that will increase the "throw" of the infrared beam.

Fig. 5: Vertical Beam Spread

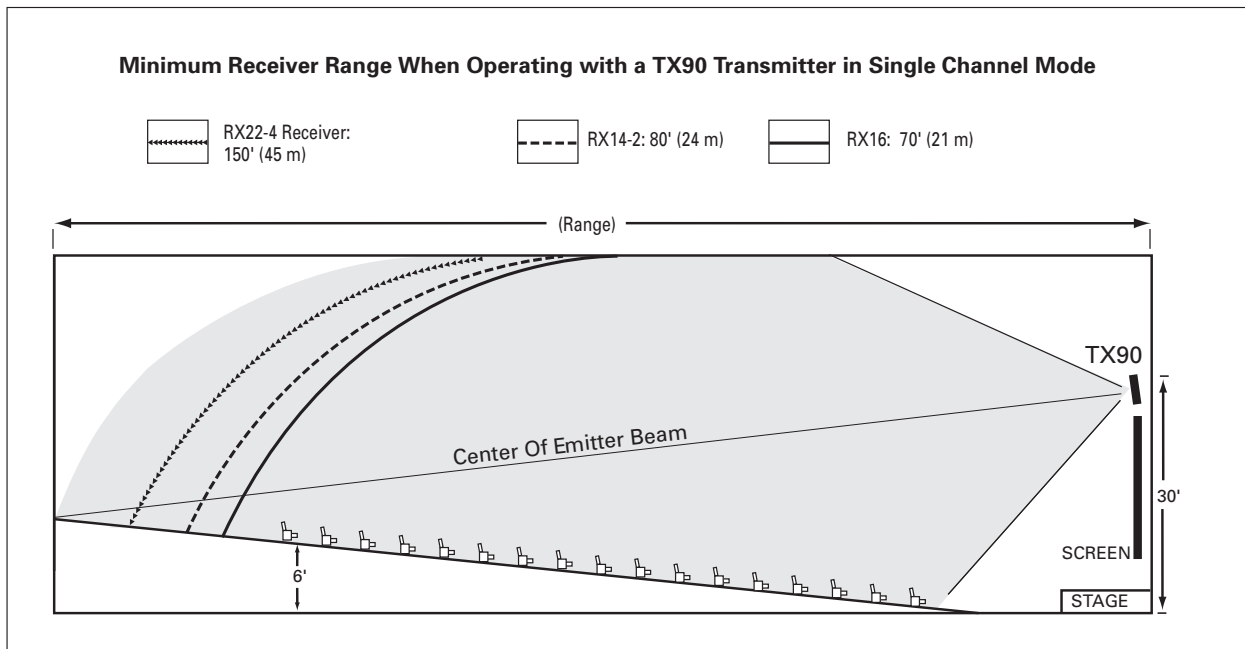


NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!



Maximum Range When Using the RX22-4 Infrared Receiver

Fig. 6: Horizontal and Vertical Radiation Polar Plots

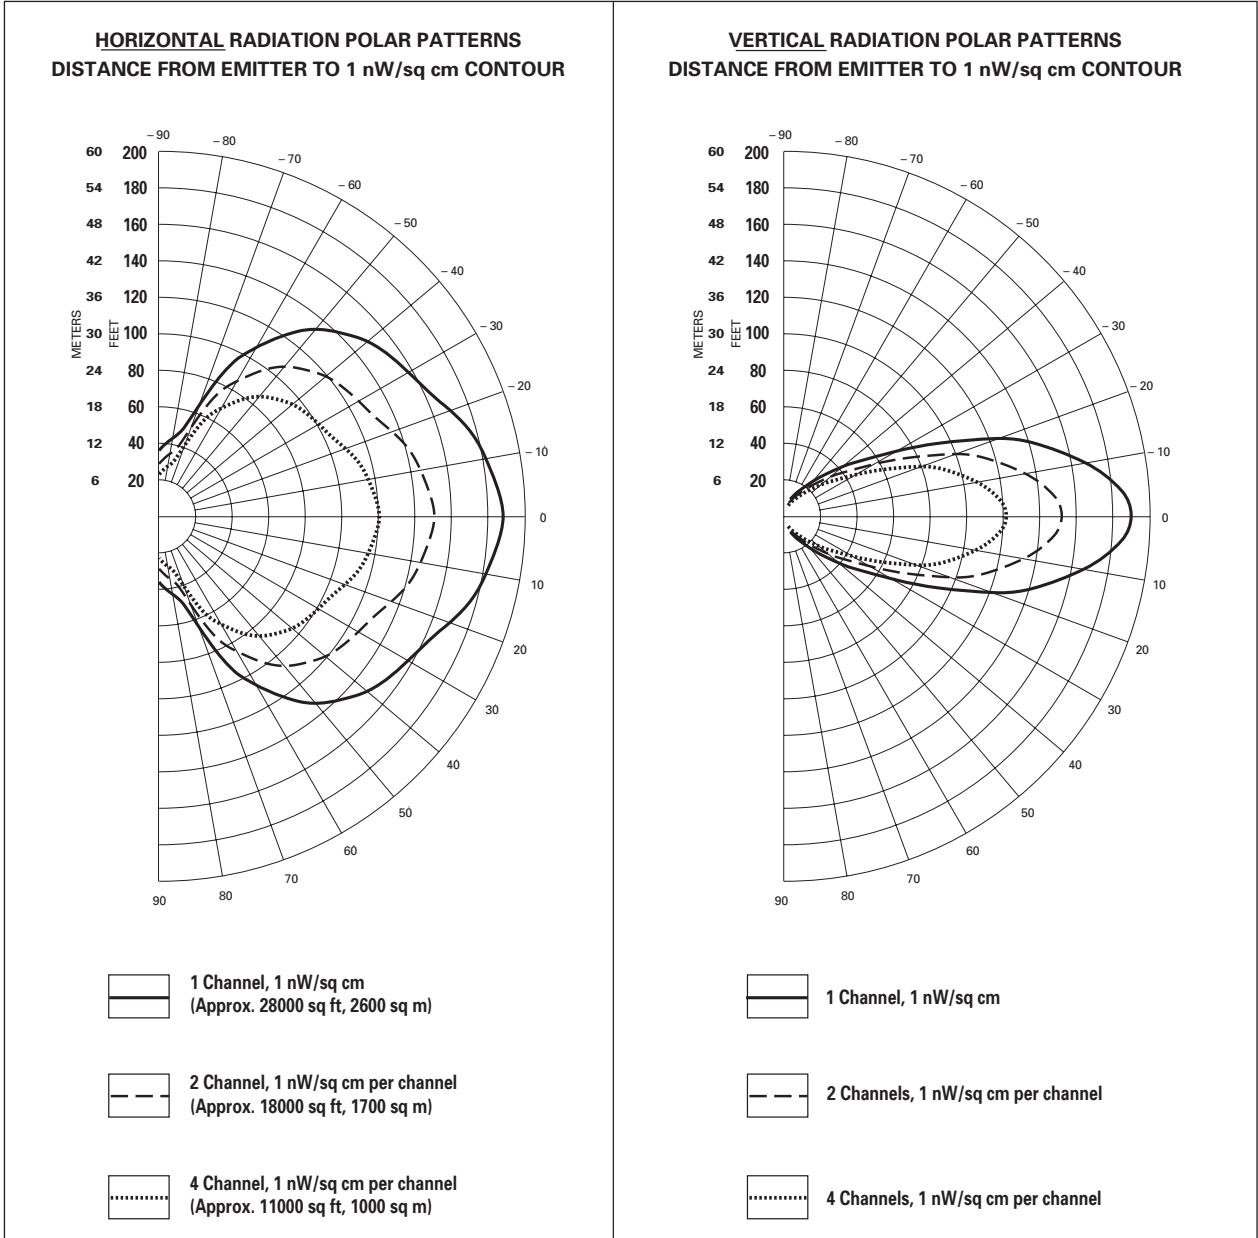

Reflections of the infrared light from walls, ceilings, and floors may change these patterns. Important: Remember to point the emitter towards the listening audience!

If you're not getting sufficient coverage with a single, properly installed TX90 Transmitter, you may need to add additional WIR TX90 Transmitters to achieve full coverage of your listening area. Figures 7a and 7b illustrate how multiple emitters can be used for large room installations.

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!

SoundPlus® Infrared System • Model WIR SYS 90V



SoundPlus® Infrared System • Model WIR SYS 90V

Multiple Emitters Installed to Maximize Coverage

Fig. 7a: Overlapping Illumination Patterns to Cover Larger Listening Areas


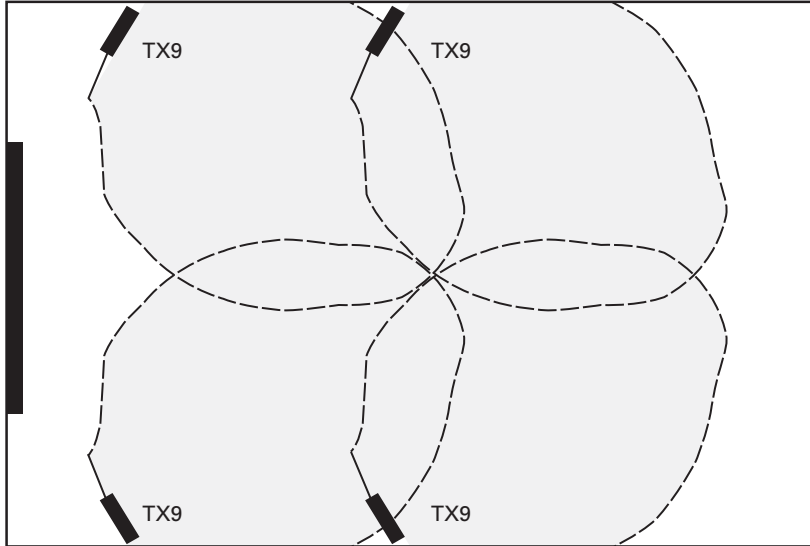


Fig. 7a above is a typical example of how multiple emitters are used to cover larger listening areas. Generally it is desirable for the illumination patterns to overlap. Note: The coverage area will vary depending on the infrared receiver being used; refer to Figures 3 and 6 to determine how many emitters are required to achieve full coverage of a listening area.

Fig. 7b: Overlapping Illumination Patterns to Cover Larger Listening Areas

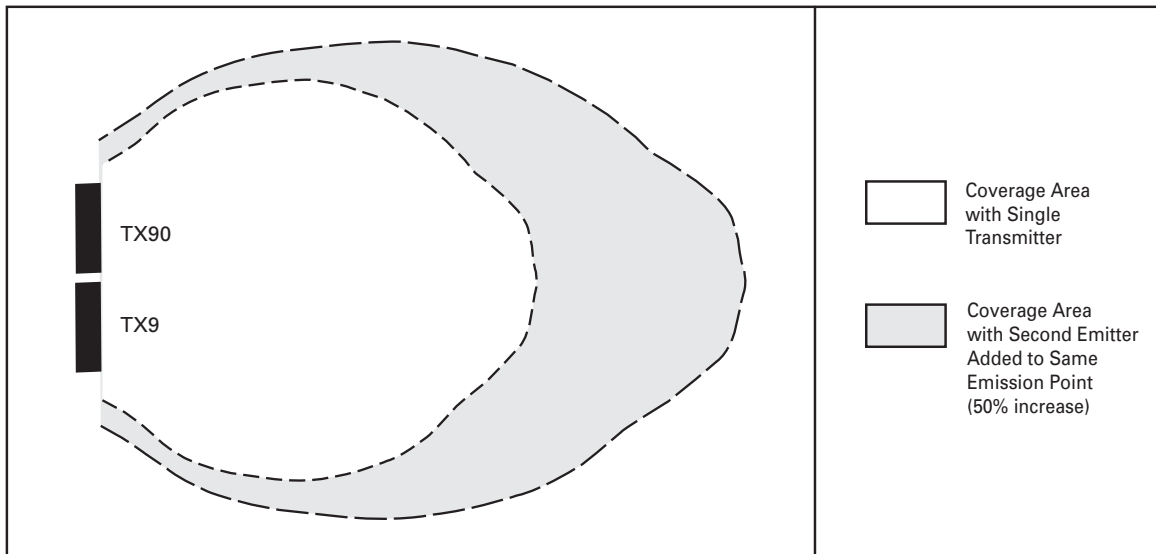

When a TX90 transmitter and TX9 emitter are used at the same emission point in single channel mode, the overall coverage area increases 50%. When using an RX22-4 receiver, as a result, the coverage area will increase to an estimated 42,000 ft² (3,902 m²); the RX14-2 will increase to 5,250 ft² (488 m²); the RX16 will increase to 4,590 ft² (426 m²).

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!


SoundPlus® Infrared System • Model WIR SYS 90V



WIR RX22-4 Receiver:

Receiver Style:	Body-Pack, dual-lens detector, lanyard
Size:	4.5" L x 2.85" W x 1.2" H (114.3 mm x 72.4 mm x 30.4 mm)
Weight:	4.6 oz (130 g) with batteries
Color and Material:	Black
Lanyard:	3 ft (.91 m), allows receiver to be worn around the neck
Operating Temperature:	-10° C to +50° C
Battery Type:	2 x AA, alkaline (BAT 001) or NiMH (BAT 026)
Battery Life:	Alkaline: 60 hours, NiMH: 30 hours/charge
Battery Drain:	25 mA, nominal
Charging Contacts:	For use only with CHG 3512
Carrier Frequency:	Channel 1: 2.3 MHz, Channel 2: 2.8 MHz Channel 3: 3.3 MHz, Channel 4: 3.8 MHz
De-Emphasis:	50 uS
FM Deviation:	±50 kHz
Signal-to-Noise Ratio:	60dB min.
Squelch:	Receiver squelches (mutes) at 40 dB S/N ratio
Frequency Response:	25 Hz to 16 KHz, +1 dB, -3 dB, electrical response
Total Harmonic Distortion:	Less than 1%, electrical response
Controls:	ON/OFF/VOLUME: combination thumbwheel knob Channel Selector: four-position rotary switch
Indicators:	Red LED "ON" indicator, flashes to indicate Low battery
Audio Output Jacks:	3.5 mm stereo mini phone jack Accepts 3.5 mm mono or stereo phone plug
Audio Output Power:	15 mW max at 32 Ω
Acoustic Output:	110 dB SSPL90 w/ EAR 013
Sensitivity:	Better than 1 nW/cm ² for 40 dB signal-to-noise ratio
Approvals:	CE, FCC, RoHS, WEEE
Warranty:	5 years on receiver, 90 days on accessories
Compatible Headphones/Earphones:	Mono or stereo, 8-32 ohms, 3.5 mm mini phone plug, HED 021, HED 026, EAR 013, EAR 014, EAR 022, NKL 001

Fig. 8: WIR RX22-4 Receiver

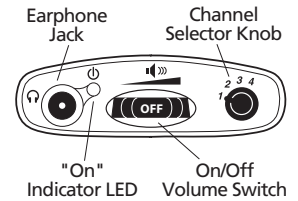

RX22-4 Top



RX22-4 Front

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!

SoundPlus® Infrared System • Model WIR SYS 90V




SoundPlus® Infrared System • Model WIR SYS 90V

WIR RX14-2 Receiver

Receiver Style:	Headset
Earpad Size:	2.5" (6.5 cm) diameter, adjustable headband
Weight:	6.7 oz (191 g) without batteries
Color and Material:	Black, plastic
Operating Range:	Up to 3,500 ft ² (325 m ²) when using a single WIR TX90 Transmitter
Battery Type:	AAA Alkaline batteries (BAT 010)
Battery Life:	Alkaline: 50 hours
Battery Drain:	25 mA, nominal
Controls:	ON/OFF switch (2) Thumbwheel volume control knob, left and right (1) Frequency push-button selector, 2.3 MHz or 2.8 MHz
Acoustic Output:	118 dB MAX SSPL90, +/- dB with 6 cc coupler
Warranty:	1-year warranty (excludes physical damage)
Approvals:	CE, RoHS

Fig 9: WIR RX14-2 Side View

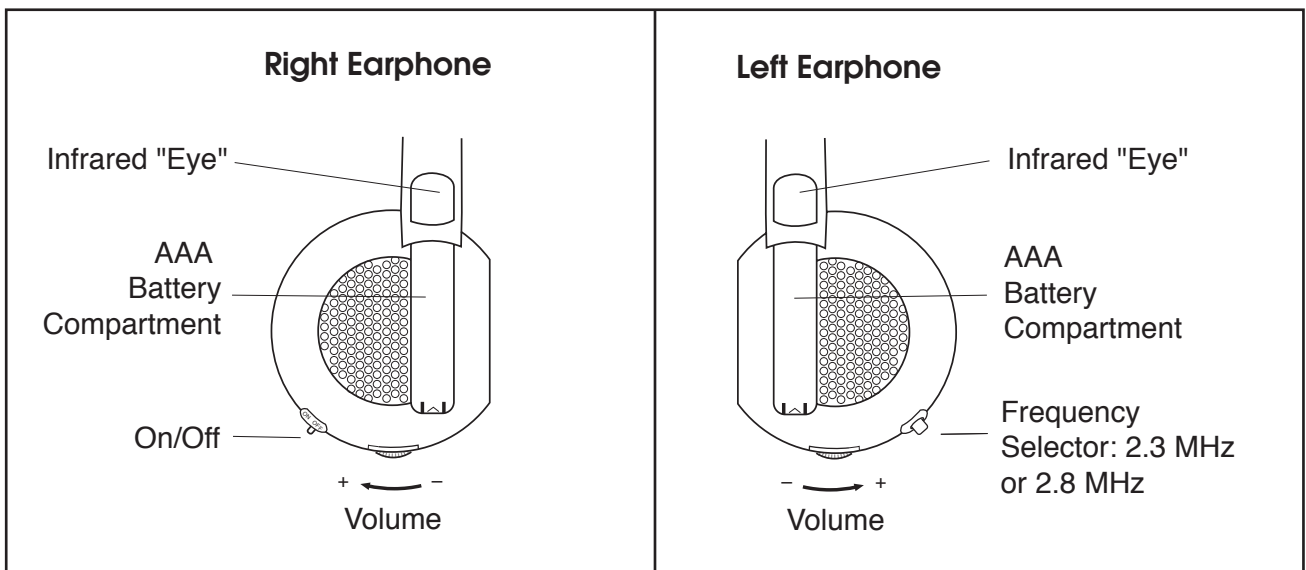

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!

SoundPlus® Infrared System • Model WIR SYS 90V



Bid Specs

WIR TX90 Transmitter

The Williams Sound Corp. WIR TX90 transmitter shall consist of an all-in-one modulator and emitter operating on switchable carrier frequencies of 2.3/2.8 MHz or 3.3/3.8 MHz. The carrier frequency shall use 50 kHz deviation and 50µs pre-emphasis.

The transmitter shall have a range of 28,000 ft² (2,600 m²) in single channel mode when using the RX22-4 receiver. The transmitter shall be contained in a metal housing with a durable plastic lens. The transmitter shall be convection cooled without fans. The transmitter shall include an omni-directional mounting bracket for permanent installations. Additional brackets shall be available for different mounting options.

The transmitter shall provide two channels of selectable carrier frequencies: CH A 2.3/2.8 MHz or CH B 3.3/3.8 MHz. Two transmitters used in tandem shall provide up 4 simultaneous channels.

The transmitter shall have two Phoenix connectors on the back for balanced or unbalanced line input. All controls and indicators shall be accessible on the bottom of the panel of the transmitter.

The transmitter shall have three application presets: Music, Hearing Assistance and Voice accessible by thumbscrew adjuster.

There shall be a 3.5mm stereo headphone jack for monitoring the processed audio before being transmitted.

Two BNC (50Ω) baseband output jacks shall be provided on the back panel for more coverage needs. The TX9 emitter panels must be used with the TX90 transmitter via RG58 coax cable.

The transmitter shall be powered by an external 24VAC, 50-60 Hz, 35VA power supply. The power connector shall be a three pin Molex type. Additional emitters shall require individual external power supplies.

The transmitter shall be covered by a five-year warranty on parts and labor. The transmitter shall be the Williams Sound Corp. model WIR TX90

WIR RX22-4 Receiver

The receiver shall be a body-pack type with IR detector lens behind face of the unit. The unit shall have a lanyard for hands-free operation. The receiver shall have a rotary-type volume control. The receiver shall operate for 60 hours with two AA alkaline batteries and for 30 hours per charge with NiMH AA batteries. The receiver shall be charged without battery removal via charger contacts in the case. A drop-in charger accessory shall recharge the batteries in 8 hours when used with CHG 3512 charger. The receiver shall be housed in an impact resistant plastic case with a hinged battery door that does not separate from the receiver. The receiver shall receive 2.3 MHz, 2.8 MHz, 3.3 MHz or 3.8 MHz modulated IR signals with 50 µs de-emphasis. The receiver shall have a 3.5 mm stereo phone jack and accommodate low-impedance mono or stereo earphones and headphones. The receiver shall accommodate neckloop telecoil couplers. The receivers shall provide 110 dB SSPL90 output with EAR 013 earbud-type earphone.

The system electrical frequency response shall be 25 Hz to 16 kHz, +1, -3 dB and the signal-to-noise ratio shall be 60 dB. The receiver shall have CE, FCC, RoHS, and WEEE approval. The receiver shall be covered by a five-year parts and labor warranty, excluding earphones, headphones, batteries and chargers.

The receiver shall be the Williams Sound Corp. model WIR RX22-4.

WIR RX14-2 Receiver

The receiver shall be a headset style with IR detectors positioned on top of each individual earphone. The receiver shall operate on 2.3 MHz or 2.8 MHz frequency. The receiver shall have an individual rotary-type volume control on each individual earphone and a on/off selection switch on the right earphone. The receiver shall have a push button frequency selector to choose between 2.3 MHz or 2.8 MHz operation. The receiver shall provide 118 dB SSPL90 output, +/- 1 dB, and a signal-to-noise ratio of 58 dB. The receiver shall operate up to 50 hours when using AAA alkaline non-rechargeable batteries. The receiver shall be encased in a black, plastic case. The receiver shall operate up to 3,500 ft² (325 m²) when using a single WIR TX9 Emitter. The receiver shall have CE, RoHS, and WEEE approval and be covered by a one-year parts and labor warranty, not including batteries or accessories.

The receiver shall be the Williams Sound Corp. model WIR RX14-2.

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!

SoundPlus® Infrared System • Model WIR SYS 90V



Contact:

United States

Williams Sound Corp.
10321 W. 70th Street
Eden Prairie, MN 55344
Phone: 800-328-6190 or 952-943-2252
Fax: 952-943-2174
Web: www.williamssound.com
Email: info@williamssound.com

Canada

Thorvin Electronics
2861 Sherwood Heights Dr. Units 36-37
Oakville, ON L6J-7K1 Canada
Phone: 800-323-6634 or 905-829-3040
Fax: 905-829-4196
Web: www.thorvinelectronics.com

United Kingdom

Sound Associates
Keeble House, 81 Island Farm Road
West Molesey, Surrey KT 2SA
United Kingdom
Phone: (44) 020 8939 5900
Fax: (44) 020 8939 5901
Web: www.soundassociates.co.uk
Email: jmurdoch@soundassociates.com

Asia, Australia, Europe, Latin America, South America, South Africa

International Sales Department
Williams Sound Corp.
10321 W. 70th Street
Eden Prairie, MN 55344 USA
Phone: +1 952 224 7791
Fax: +1 952 943 2174
Email: info@williamssound.com
Web: www.williamssound.com

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE!